



SECTION N


HT-8FC

EIGHT (8) FLIGHT CORE


PROFILES OF STANDARDIZED ENCLOSED SPIRAL CORES

TOP Numbers = Downward Angles around the STEM Pipe \longrightarrow

BANKING ANGLES = BOTTOM Numbers - CENTER

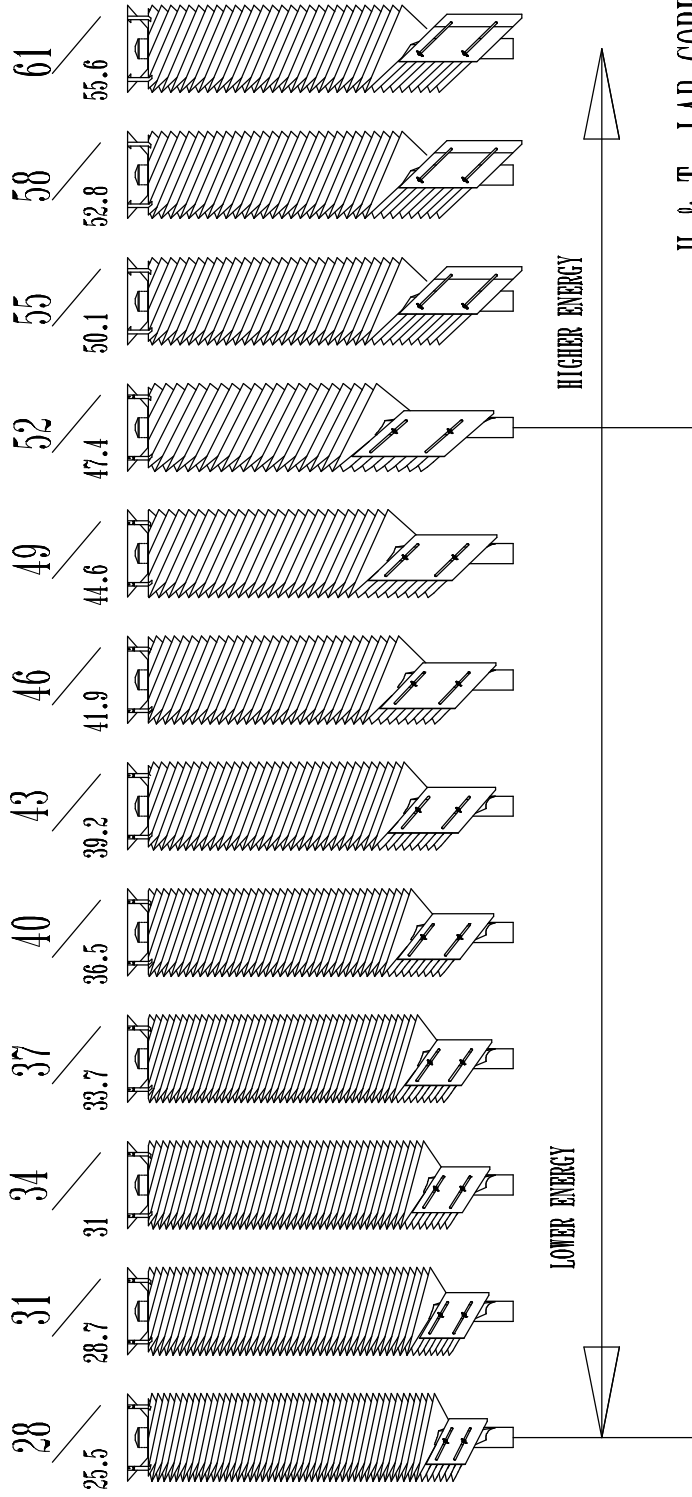


CUSTOMER
SEED SAMPLES

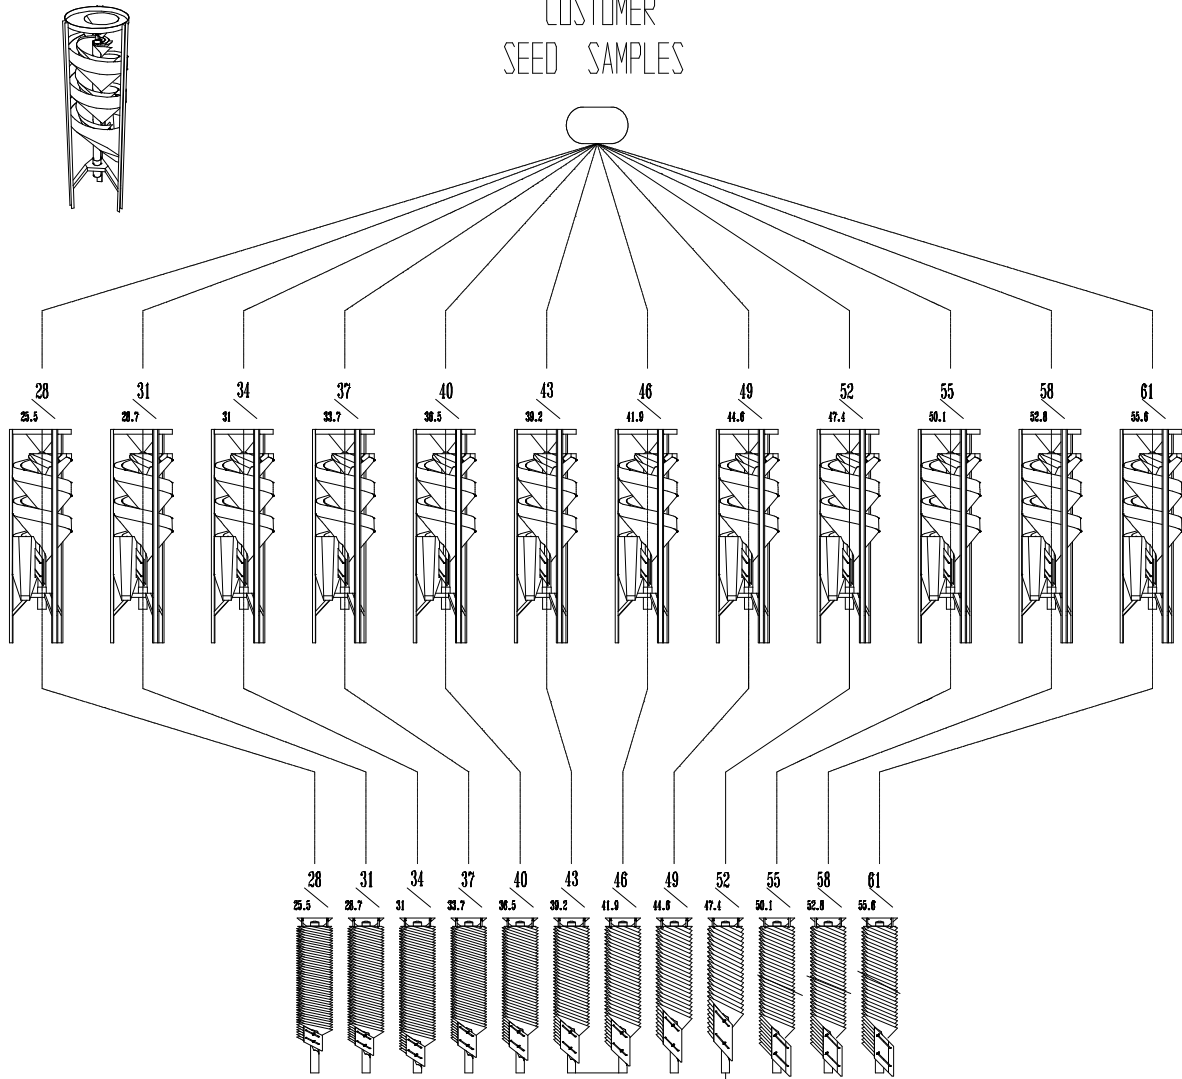


H & T LAB CORES

TOP Numbers = Downward Angles around the STEM Pipe
 BANKING ANGLES = BOTTOM Numbers - CENTER

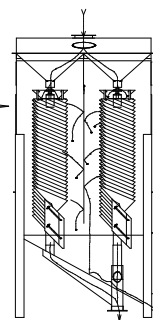

*Information H & T needs to retrofit cores into
Different Kinds of Spiral Cabinets*

Stud Pipe to Stud Pipe Length for ... H & T (LP) Cabinets = 52"

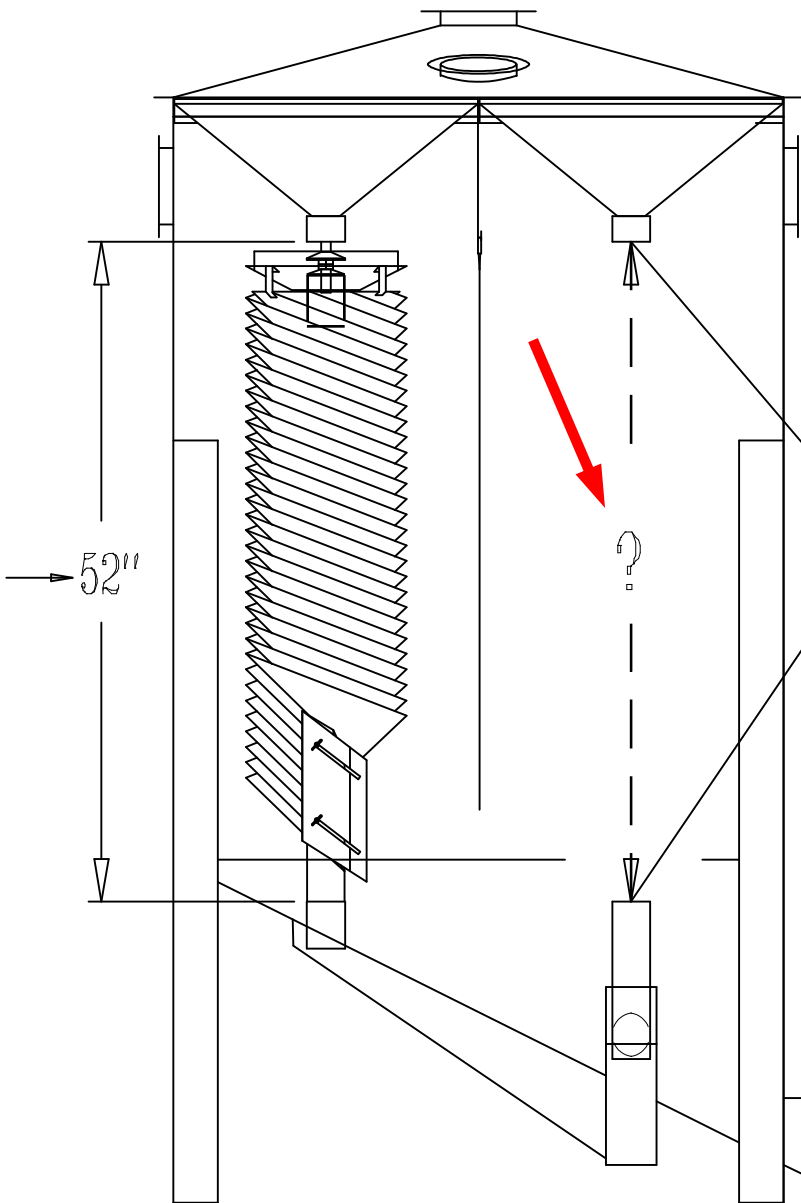

- 1 - Need this Distance from ... Bottom of Hopper Stub Pipe To ... Top of Floor Stub Pipe
- 2 - Also the ... Outside Diameter of each Stub Pipe (Top & Bottom)

Important - You can use a Small Tape Measurer to go all the way thru the core

